



PowerTel 196

with Call Blocker



 
USER MANUAL

SUMMARY

DESCRIPTION OF TELEPHONE PowerTel 196	4
INSTALLATION	5
Recommendations	5
Telephone installation	5
First power on set	5
Wall mounting	5
Caution	6
GENERAL USE	6
Make a call	6
Call from memories	6
Dial back an outgoing number	6
Answering a call	7
Set hands-free volume	7
Set ringer volume	7
Set handset volume (and audio-boost)	7
Handset receiver equalizer adjustment	7
PROGRAMMING	8
Select language	8
Select contrast	8
Set Flash Time	8
Ringer tone	8
Call blocker	9
Call block overview	9
Manual call block mode	10
Enable MANUAL mode	10
Add numbers to Blocklist	10
Edit numbers in Blocklist	10
Delete numbers in Blocklist	11
Delete a number from blocklist	11
Automatic call block mode	11
VIPs only	11
Contacts only	11
Anonymous call block mode	12
Block Private Calls	12
Block All Anonymous Calls	12

Set Block Anonymous Calls OFF -----	12
Key tones -----	13
Confirmation tone -----	13
Software version -----	13
Dial mode -----	13
Reset -----	14
Set direct access memories M1/M2/KEY1 -----	14
Delete an entry -----	14
Copy a contact or call list number to M1/M2/KEY1-----	14
Phonebook -----	15
View or dial an entry -----	15
Edit a name and number -----	16
Delete an entry -----	16
Delete all contacts -----	16
Memory status -----	16
Caller ID and calls list -----	16
Caller ID -----	17
Call list -----	17
View the call list -----	17
Dial a number in the call list -----	17
Copy a call list number to the phonebook -----	17
Delete an entry -----	18
Delete the entire call list -----	18
Date and time -----	18
Set the date and time -----	18
Set the time format -----	18
Help -----	19
No dial tone -----	19
No ring tone -----	19
Caller ID service does not work -----	19
A phonebook entry cannot be stored -----	19
No display -----	19
WARRANTY -----	20
SECURITY -----	22
ENVIRONMENT -----	22
CONFORMITY -----	22

DESCRIPTION OF TELEPHONE PowerTel 196

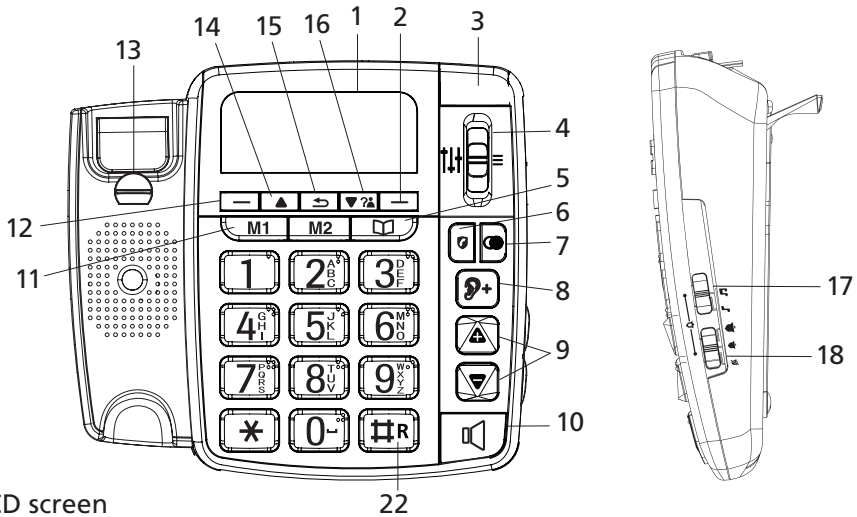

1. LCD screen
2. Right soft key
3. Indicator (incoming call)
4. Handset Receiver Equalizer
5. Phonebook key
6. Call Blocker key
7. Redial key
8. Audio boost (Handset receiver volume amplify)
9. Handsfree or Handset volume increase/decrease
10. Handsfree key

11. 2 one touch direct memory (M1 and M2)
12. Left soft key
13. Hanger knob

14. Up
15. Return key
16. Down/CID Review

17. Ringer pitch
18. Ringer volume control

 
19. AMPLIFY Override Switch

20. DC 6V input

21. Line jack

22. # by normal key dialing

R by long press on the key

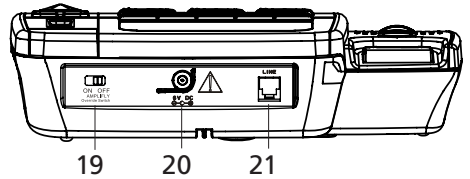


INSTALLATION

Recommendations

- Do not expose the phone to direct sunlight or excessive temperature.
- Operating temperature between + 5 ° C and + 40 ° C.
- Your phone must be installed at least 1 meter away from radio equipment such as television, cell phone, etc.

Telephone installation

 - Your phone should be placed on a flat surface for more stability. Plug the coiled cord into the handset (A) and into the socket on the left side of the phone (B).
- Plug the small end of power adapter into power jack on base (D)
- Plug the large end of power adapter into a wall outlet (E)
- Plug the telephone cord into the socket at the back of the set and into the wall outlet (C) or into the telephone port of the internet box. For desktop position, raise the 2 feet under the base (F).

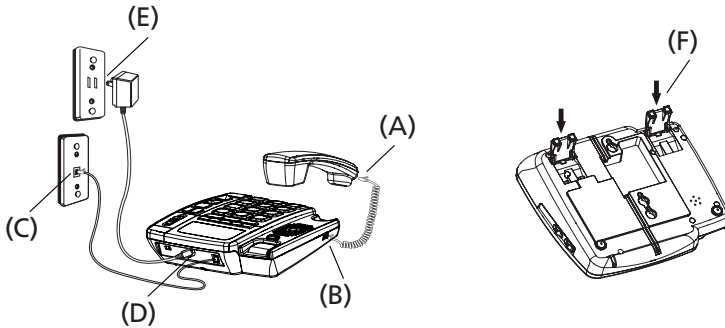

First Power on setup

An on-screen installation will guide you to setup your phone language , date and time when first power on. You can later change your setting by follow select language page 8.

Wall mounting

- Fold the 2 feet under the base (F).
- Flip the small plastic piece on the base (13).
- Drill two 6mm holes spaced 100mm apart. Insert 2 wall plugs and screw in the wood screws (3.5 mm in diameter and 30 mm long).
- Mount the base to the 2 screws by pulling it downwards.

Caution

- Only use the 6.0V DC power supply provided with the telephone.
AC/DC power adaptor model : HJ-0600400P1-EU or HJ-0600400A1-UK
Manufacturer : Shenzhen Huajin Electronic Co., Ltd.
Input : AC 100 - 240 V ; 50/60 Hz ; 0.15A max.
Output : DC 6.0V ; 400mA



OR

- AC/DC power adaptor model : AT-337E-060045A or AT-536B-060045B
Manufacturer : Shenzhen Baijunda Electronic Co., Ltd.
Input : AC 100 - 240 V ; 50/60 Hz ; 0.2A max.
Output : DC 6.0V ; 450mA
For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.

GENERAL USE

PT196 is a FULL DUPLEX phone, allowing you to enjoy simultaneous 2-way conversation without any acoustic feedback, in the receiver during normal conversation as well as in handsfree mode conversation.





Make a call

- Pick up the handset or press the  key.
- Dial the number using the keypad.
- To end the call : Put back the handset on the base or press the  key.



Call from memories

- Pick up the handset or press  key.
- Press  ,  or  +  /  + Call.
- At the end of the call, hang up the handset or press the  key.

Dial back an outgoing number



- Press the  key.
- Press  or  to select the number.
- Pick up the handset or press the  key.

Answering a call

- To answer : pick up the handset or press the  key (hands-free mode).
- To hang up : replace the handset on the base or press the  key.

Set hands-free volume

During (hands-free) conversation :

- Press  to increase the volume.
- Press  to decrease the volume.
- 8 levels can be selected.

Set ringer volume

Slide the switch to adjust the ringer volume   .

Note : When the ringer is off, the call light will still flash to indicate an incoming call.


Set handset volume (and audio-boost)

During handset conversation, 2 modes of amplification are available:

- **Standard mode**

Press  or  to increase or decrease (8 levels).

- **Audio boost mode (extra strong upto + 60db)**


During handset conversation, press the + key. Press this button again to stop amplification.

A slider on the back of the phone (AMPLIFY) is used to always activate the audio boost function. By default, the position is "OFF" If it is in the "ON" position, the audio boost will be automatically activated at each call.

Equalizer


Choose the sound profile that suits you best.

Slide the switch to adjust the handset receiver sound frequency pitch


(3 selections) .

PROGRAMMING


Select language

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select the **Language**. Press **OK**.
4. Press ▲ or ▼ to select the required language. Press **OK**.
5. Press  to return to standby.

Select contrast

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Display contrast**. Press **OK**.
4. Press ▲ or ▼ to select the required level. Press **OK**.
5. Press  to return to standby.


Set Flash Time

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Recall time**. Press **OK**.
4. Press ▲ or ▼ to select the required flash time. Press **OK**.
5. Press  to return to standby.

Ringer tone

You can set different ringer tones for your calls. Choose from 20 different tones.

You will hear a sample ring as you scroll to each ring tone.

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Ringer tone**. Press **OK**.
4. Press ▲ or ▼ to select the required ringer tone. Press **OK**.
5. Press  to return to standby.

Call blocker

This telephone is built-in with Smart Call Block feature*. This feature will help you avoid nuisance calls by only allowing some numbers to make your phone ring. Default setting of Smart Call Block in this telephone is OFF but you can enable it via your phone settings, as explained in the following paragraphs.

**This feature requires a subscription of Caller Line Identification service from your telephone service provider.*


Call block overview

Setting	Explanations
OFF	Call Block function (Block all call with numbers) is Disabled. This is the default mode.
ON	Call Block function is set to Manual. Numbers registered in the black list will not go through and the phone will ring silently. Numbers can be added to the list while the phone is ringing and / or after a call (to enable, see part 1).
CONTACTS	In this automatic mode, any number not registered to your phonebook will be automatically be blocked and not cause your phone to ring. All calls from contacts registered to your phonebook will proceed normally. When this mode is chosen, Contacts OK is displayed on LCD in idle mode unless you have unread messages/missed calls (to enable, see part 2.1).
VIPS	In this second automatic mode, only calls from contacts registered as VIP in your phonebook will go through and cause your phone to ring. Any other number will not ring. When this mode is chosen, VIP OK is displayed on the LCD in idle mode unless you have unread messages / missed calls (to enable, see part 2.2).
ANONYME	This extra feature allows you to block call that do not have a number attached to them (ie private calls, international calls, etc). This option can be enabled on top of any of the previous four (to enable, see part 3).

1. Manual call block mode

Manual call block is the easiest option when starting out. When you chose **ON** in the call block settings, all calling numbers registered in your blacklist will be blocked. You can add/remove numbers from that list at any time.

How to block an incoming call:

When the phone is ringing and before answering, press . It will terminate the call and offer you the option to register the number to the blacklist in one click. Then to confirm the registration of this number in the blacklist, press **OK**.

IMPORTANT: if you don't confirm, the number will not be added to the blacklist and the next call will go through normally.

1.1. Enable MANUAL mode


Menu	↑	↓	Call block	↑	↓	Block set.	Off
							On
							VIP OK
							Contacts OK

Press **OK**, press ▲ or ▼ to select **Call block**.

Press **OK**, press ▲ or ▼ to select **Block set**.

Press **OK**, press ▲ or ▼ to select **On** (manual mode).


OR

In idle mode, press  to access **Block set** directly.


 
After you enable this option, the call block icon  will be displayed on the LCD.

1.2. Add numbers to Blocklist

In idle mode,

1. Press  key, **Call block** and its icon is displayed, Press **OK** then press ▲ or ▼ to select **Blocklist**, press **OK** to show **Blocklist**.
2. Press ▲ or ▼ to select numbers stored in **Blocklist**.
3. Press **Options** to select **Add**, enter number to be blocked, press **Save key** to save.

NOTE: 2 more ways to add incoming and outgoing call numbers in Block list:

1. From incoming call numbers
 - Press ▼ , to enter Call list, press ▲ or ▼ to select the stored numbers in **CALL LIST**.
 - Press **Options**, press ▲ or ▼ to select the **Block number**.
 - Press **OK** to show selected number, press **Save** to save to Block list.
2. From outgoing call numbers
 - Press , press ▲ or ▼ to select redial list entry.
 - Press **Options**, press ▲ or ▼ to select to **Block number**.
 - Press **OK** to show selected number, press **Save** to save to **Block list**.

1.3. Edit numbers in Blocklist

In idle mode,

1. Repeat step 1 and 2 in Section 1.2. to select the stored numbers.
2. Press **Options**, press ▲ or ▼ to select **Edit**, start to edit selected number press **OK** to save.

1.4. Delete numbers in Blocklist

1.4.1. Delete a number from blocklist

1. Repeat step 1 and 2 in Section 1.2. to select the stored numbers.
2. Press **Options**, press ▲ or ▼ to select **DELETE**, **Are you sure?** is shown, and then press **Yes** to confirm.

1.4.2. Delete all numbers from blocklist

In idle mode,

1. Repeat step 1 and 2 in Section 1.2. to select the stored numbers.
2. Press **Options**, press ▲ or ▼ to select **Delete all** number to delete at a time, press **OK**, **Are you sure?** is shown, and then press **OK** to confirm.

2. Automatic call block mode

2.1. VIPs only

In this restrictive automatic mode, only calls from numbers registered as VIP in your phonebook will go through and make your phone ring.

Menu	▲▼	Call block	▲▼	Block set.	Off
					On
					VIP OK
					Contacts OK

Press **Menu**, press ▲ or ▼ to select **Call block**.

Press **OK**, press ▲ or ▼ to select **Block set**.

Press **OK**, press ▲ or ▼ to select **VIP OK** (Automatic mode).

2.2. Contacts only

In this broad automatic mode, only calls from contacts registered in your phonebook (normal and VIP) will go through and make your phone ring.

Menu	▲▼	Call block	▲▼	Block set.	Off
					On
					VIP OK
					Contacts OK

Press **Menu**, press ▲ or ▼ to select **Call block**.

Press **OK**, press ▲ or ▼ to select **Block set**.

Press **OK**, press ▲ or ▼ to select **Contacts OK** (Automatic mode).

3. Anonymous call block mode

This feature allows you to block numbers that do not display a number on your phone. It can be enabled or disabled independently from the previous call block modes.

Menu	Call block	Block anonymous	Private
			All
			Off

Press **Menu**, press ▲ or ▼ and Press **OK** to select **Call block**.



Press ▲ or ▼ to select **Block anonymous**.

Press **OK**, press ▲ or ▼ to select one of the options.

3.1. Block Private Calls

This mode will block incoming calls that have been purposely kept their numbers private from you.


In idle mode,

1. Press  key, **Call block** and its icon is displayed, press **OK**.
2. Press ▲ or ▼ to select **Block anonymous**.
3. Press **OK**, press ▲ or ▼ to select **Private**, press **OK** to confirm.
4. Press Back twice .
5.  will be displayed on the upper side of LCD.

3.2. Block All Anonymous Calls


This mode will block all unknown incoming calls, including private calls, international calls, pay phone and other out-of-area calls.

In idle mode,

1. Repeat step 1 and 2 in Section 3.1.
2. Press **OK**, press ▲ or ▼ to select **ALL**, press **OK** to confirm.
3.  After you enable this option, the call block icon will be displayed on the LCD.


3.3. Set Block Anonymous Calls OFF

In idle mode,

1. Repeat step 1 and 2 in Section 3.1.
2. Press **OK**, press ▲ or ▼ to select **Off**, press **OK** to confirm.
3.  will only disappear from the LCD if the regular call block (see 1. And 2.) is also set to OFF.


Key tones

When you press a button on the keypad, you will hear a beep. You can switch these beeps on or off.


1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Keypad tones**. Press **OK**.
4. Press ▲ or ▼ to select **Tones on** or **Tones off**. Press **OK**.
5. Press  to return to standby.

Confirmation tones


When you confirm a setting, you will hear a beep. You can switch these beeps on or off.

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Confirmation tones**. Press **OK**.
4. Press ▲ or ▼ to select **Tones on** or **Tones off**. Press **OK**.
5. Press  to return to standby.

Software version

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Software version**. Press **OK**.
4. The software version is displayed
5. Press  to return to standby.


Dial Mode

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Dial mode**. Press **OK**.
4. Press ▲ or ▼ to select **Tone** or **Pulse**. Press **OK**.
5. Press  to return to standby.


Reset

1. Press **Menu**.
2. Press ▲ or ▼ to select **Settings**. Press **OK**.
3. Press ▲ or ▼ to select **Reset**. Press **OK**.
4. Press ▲ or ▼ to select **Reset settings** or **Delete user data**. Press **OK**.
5. Press **Yes** to confirm.
6. Unit will reset and Welcome mode - Language selection will show on LCD screen.

Set Direct access memories M1/M2/KEY1


1. Press **Menu**.
2. Press ▲ or ▼ to select **Direct memory**. Press **OK**.
3. Press ▲ or ▼ to select **M1, M2 or KEY1**. Press **Add** or **Options/Edit/OK**.
4. Enter the number using the keypad. Press **Save**.
5. Press  to return to standby.

Delete an entry


1. Press **Menu**.
2. Press ▲ or ▼ to select **Direct memory**. Press **OK**.
3. Press ▲ or ▼ to the entry you want to delete. Press **Options**.
4. Press ▲ or ▼ to select **Delete**. Press **OK**.
5. The display shows **Are You Sure?**. Press **Yes**.
6. Press  to return to standby.

Copy a contact or call list number to M1/M2/KEY1


When M1/M2/KEY1 are empty :

1. Press **Menu**.
2. Press ▲ or ▼ to select **Direct memory**. Press **OK**.
3. Press ▲ or ▼ to select **M1, M2 or KEY1**. Press **Add**.
4. Press **Options**.
5. Press ▲ or ▼ to select **From contacts** or **From calls list**. Press **OK**.
6. Press ▲ or ▼ to select the number. Press **Select**.
7. Press  to return to standby.

Phonebook

1. Press .
2. When phonebook is empty :
 - Press **Add**.
 - Enter the name using the keypad. Press **Next**.

When phonebook has records :

- Press **Options**.
 - Press **▲** or **▼** to select **Add new contact**. Press **OK**.
3. Enter the name using the keypad. Press **Next**.
 4. Enter the number using the keypad. Press **Save**.
 5. Add to VIP ? Yes / No.
 6. Press **Yes** or **No** then contact saved.
 7. Press  to return to standby.

Entering names

Use the keypad letters to enter names, e.g. to store Tom:

Press 8 once to enter T.

Press 6 three times to enter o.

Press 6 once to enter m.



Writing tips

Press the **Clear** to delete the last character or digit.



Press **0** to insert a space.

Press **#** to change from upper to lower case and from characters to digits.



View or dial an entry

1. Press .
2. Press **▲** or **▼** to select the entry you want.
OR
Enter first letter of the name to search alphabetically.
3. Lift the handset to dial the number, or Press  to dial the number over hands-free.



Edit a name and number

1. Press . The first entry will be displayed.
2. Press ▲ or ▼ to the entry you want to edit. Press **Options**.
3. Press ▲ or ▼ to select **Edit contact**. Press **OK**.
4. The name is displayed. Delete the name if required. Enter the new name. Press **Next**.
5. The existing number is displayed. Delete the number if required. Enter the new number. Press **Save**.
6. Add to VIP ? Yes / No.
7. Press **Yes** or **No** then contact saved.
8. Press  to return to standby.



Delete an entry

1. Press .
2. Press ▲ or ▼ to the entry you want to delete. Press **Options**.
3. Press ▲ or ▼ to select **Delete contact**. Press **OK**.
4. The display shows **Are You Sure?**. Press **Yes**.
5. Press  to return to standby.

Delete all contacts

1. Press . Press **Options**.
2. Press ▲ or ▼ to select **Delete all contacts**. Press **OK**.
3. The display shows **Are you sure?**. Press **Yes**.
4. Press  to return to standby.

Memory status

1. Press . Press **Options**.
2. Press ▲ or ▼ to select **Memory status**. Press **OK**.
3. The number of contacts stored is displayed.
4. Press  to return to standby.

Caller ID and calls list

Important

To use Caller ID, you must first subscribe to the service from your network provider. A subscription fee may be payable.

To ensure that the caller's name is displayed, make sure you have stored the full telephone number, including the area code in the phonebook.

Caller ID

If subscribed to Caller ID, the caller's number will be displayed (provided it is not withheld) prior to answering the call.

Call list

The call list stores details of the last 30 received calls and missed calls, including the phone number and date of the call.

View the call list

1. Press **▼ ?** to open the calls list. If there are no calls in the list, the display shows **List empty**.
2. Press **▲** or **▼** to scroll through the list.
3. When you reach the end of the list the display will show **---End---**

Dial a number in the call list

1. Press **▼ ?** to open the calls list.
2. Press **▲** or **▼** to the entry you want.
3. Lift the handset to dial the number, or press **☎** to dial the number over hands-free.

Copy a call list number to the phonebook

1. Press **▼ ?** to open the calls list.
2. Press **▲** or **▼** to the entry you want. Press **Options**.
3. Press **▲** or **▼** to select **Save number**. Press **OK**.
4. Enter the name. Press **Next**.
5. Edit the number if required. Press **Save**. Add to VIP?
6. Add to VIP ? Yes / No.
7. Press Yes or No then contact saved.
8. Press **↩** to return to standby.

See sections 'Entering names' and 'Writing tips'.

Delete an entry

1. Press **▼ ?** to open the calls list.
2. Press **▲** or **▼** to the entry you want. Press **Options**.
3. Press **▲** or **▼** to **Delete call**. Press **OK**.
4. Press **↶** to return to standby.

Delete the entire call list

1. Press **▼ ?** to open the calls list. Press **Options**.
2. Press **▲** or **▼** to **Delete all calls**. Press **OK**.
3. The display shows **Are you sure?**. Press **Yes**.
4. Press **↶** to return to standby.

Date and time

If you have subscribed to Caller ID Service, the date and time is set automatically when you receive your first call.

If you do not have Caller ID service, you can set the date and time manually.

Set the date and time

1. Press **Menu**.
2. Press **▲** or **▼** to select **Time & date**. Press **OK**.
3. Press **▲** or **▼** to select **Set time & date**. Press **OK**.
4. Enter the time using the keypad (e.g. 06--30 for 6:30am). Press **Next**.
5. Use the keypad to enter the date using the format **DD/MM/YYYY**. Press **Save**.
6. Press **↶** to return to standby.

Set the time format

You can use a 24 hour or 12 hour format to display the time on your phone. To set your preference:

1. Press **Menu**.
2. Press **▲** or **▼** to select **Set time & date**. Press **OK**.
3. Press **▲** or **▼** to select **Time format**. Press **OK**.
4. Press **▲** or **▼** to select either **12 hour** or **24 hour**. Press **OK**.
5. Press **↶** to return to standby.

Help

No dial tone

- Use only the telephone line cord supplied.
- Check that the telephone line cord is connected properly.

No ring tone

- The ring tone is deactivated.
- Increase the volume.

Caller ID service does not work

- Check your subscription with your network operator.

A phonebook entry cannot be stored

- The phonebook is full. Delete an entry to free memory.

No display

- Try disconnecting and connecting the power supply.

WARRANTY

Please read carefully the user guide included in this box. PowerTel 196 is an approved equipment in accordance with the European regulations, attested by the CE marking. The product you just bought is a technological product, it must be handled with care.

Note: You have a legal warranty on this product in accordance with the regulations applicable to the sale of consumer goods in the country in which you made this purchase.

For any information regarding this legal warranty, please contact your dealer.

Without prejudice to the legal guarantee of the products, ATLINKS guarantees that the product in this box conforms to its technical specifications contained in the user guide included in the this box, and this during a warranty period, counted from the date of purchase of the new product, the date on your invoice or ticket checkout where is indicated the name of your reseller, and equal to: Twenty four (24) months for the telephone, excluding consumables, accessories and batteries. For any claim under this warranty during the warranty period, you must return the entire Product to your dealer, together with the proof of purchase, the invoice or receipt issued by your dealer, indicating the place of purchase and the serial number of the Product, following the appearance or discovery of the defect. ATLINKS undertakes to repair any defective item due to a defect in design, material or workmanship, at its expense, or to replace, at its expense, by an identical or at least equivalent element in terms of functionalities and performance. If the repair or replacement is impossible under normal commercial conditions, the Product will be refunded or replaced by a Product equivalent. Within the maximum limit allowed by the applicable law, the product or element replacement, which may be new or reconditioned, is warranted during a period of ninety (90) days from the date of repair or until the end date of the initial warranty period, whichever is the earlier greater than ninety (90) days, it being specified that any period of immobilization of the Product of at least seven (7) days will be added to the warranty period remaining to run.

This warranty does not apply in the following cases:

- Installation or use not in accordance with the instructions in the guide of the user,
- Incorrect connection or abnormal use of the Product, especially with noncompatible accessories, as indicated in the user guide,
- Product opened, modified or replaced by means of non-approved parts, serial number deleted, illegible, damaged,
- Normal wear, including normal wear and tear on accessories, batteries and displays,
- Failure to comply with the technical and safety standards in force in the area geographical use,
- Product having suffered a shock or a fall,

- Product damaged by lightning, electrical surge, heat source or radiation, water damage, exposure to conditions of temperature, humidity or other excessive ambient conditions or any other cause external to the product,
- Negligence or faulty maintenance,
- An intervention, a modification or a repair carried out by a not authorized by ATLINKS.

If the returned Product is not covered by the warranty, you will receive a quote from repair that will mention the cost of analysis and transportation costs that you will be charged if you want the Product returned to you. This guarantee is valid in the country in which you regularly purchased the Product, provided that the country is a member of the European Union. Subject to the legal provisions in force, all warranties other than described herein are expressly excluded.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW,

- A) THIS WARRANTY IS EXCLUSIVE TO ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE PARTICULAR;
- B) ATLINKS DISCLAIMS LIABILITY FOR LOSS OR DETERIORATION OF DATA, LOSS OF USE LOST TO WIN, LOSS OF CHANCE, DEREVENUES OR INCOME, LOSS OF OPERATION, DAMAGES INDIRECT, CONSEQUENTIAL, CONSEQUENTIAL OR INCIDENTAL;
- C) ATLINKS LIABILITY IS LIMITED TO THE VALUE OF PURCHASE OF PRODUCT EXCEPT HEAVIL OR UNINTENTIONAL FAULT AND EXCEPT DAMAGE BODY

SECURITY

Do not use your telephone to report for a gas leak or other potential explosion hazard. Do not try to open your phone to avoid electrical shock.

Your telephone must be installed in a dry place, away from heat, humidity and direct sunlight.

ENVIRONMENT



This symbol means that your inoperative appliance must be collected separately and not mixed with the household waste.

Help us preserve the environment in which we live!

Declaration of conformity

Hereby, ATLINKS EUROPE declares that the Corded type Telephone (PowerTel 196) is in compliance with Legislation:

Electromagnetic Compatibility Regulations 2016 (S.I. 2016/ 1091), and Electrical Equipment (Safety) Regulations 2016 (S.I. 2016/ 1101).

To view the complete Declaration of Conformity, please refer to the free download available on our website:

www.amplicomms.com

**UK
CA**

www.amplicomms.com

ATLINKS Europe
147 avenue Paul Doumer
92500 RUEIL-MALMAISON France
RCS Nanterre 508 823 747

© ATLINKS 2021 - Reproduction prohibited.

The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.

AMPLICOMMS and ATLINKS are registered trademarks.

PowerTel 196 w/Call block
A/W No.: 10002463 Rev.0 (EN)
Printed in China